

Fault description:

PC communication with frequency converter is slow. The frequency converter changes frequency very slowly after you change it on PC.

Solution:

Check the voltage between T+ and T- on the 485 communication board. It should be 2.7V~3.0V. If it isn't, change the 485 communication board.

Make sure the communication cable from electric box to PC is connected well, and the cable's GND is connected well with the board's GND.

